
Pritz Hatchet Planimeter


Building Instructions

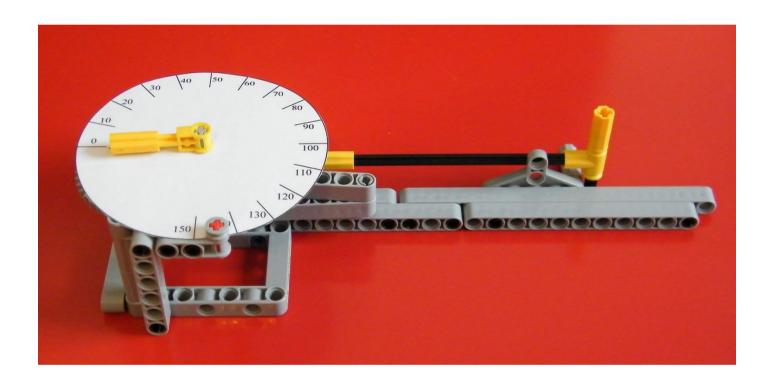



Summary


Building Instruction	p1-9
Dial	p10


Model and building instructions designed by Nico71

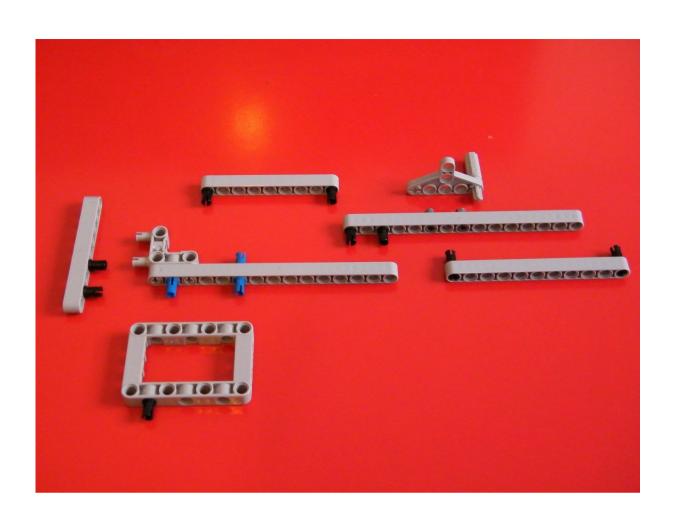


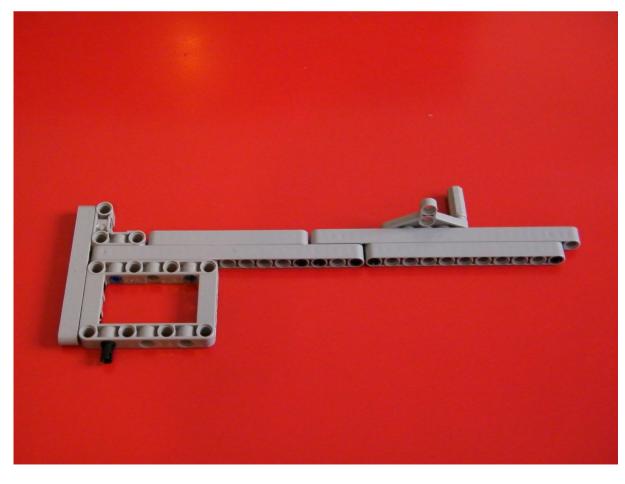


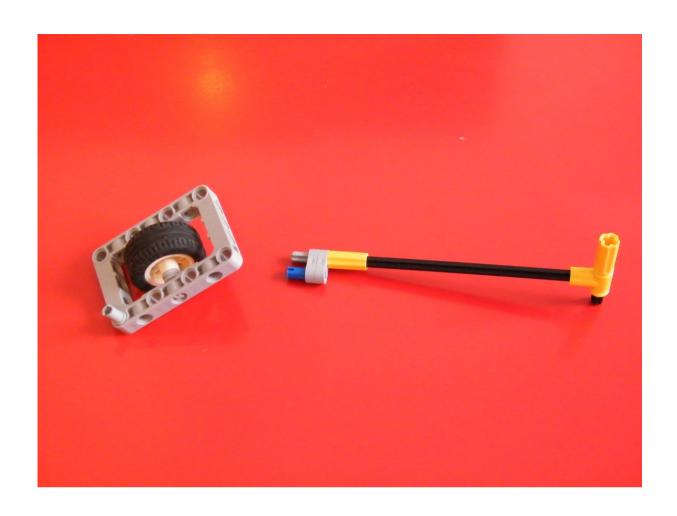


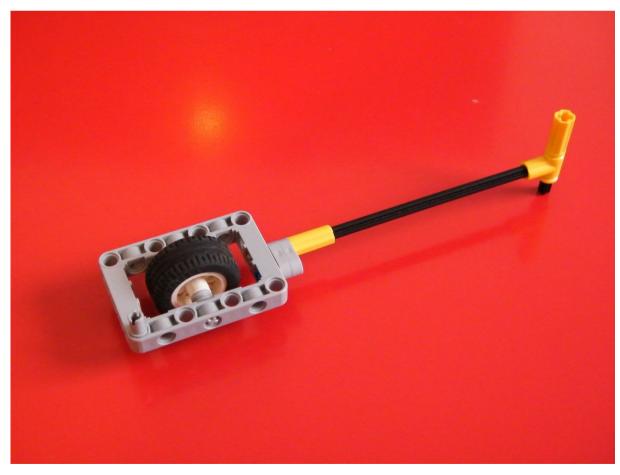


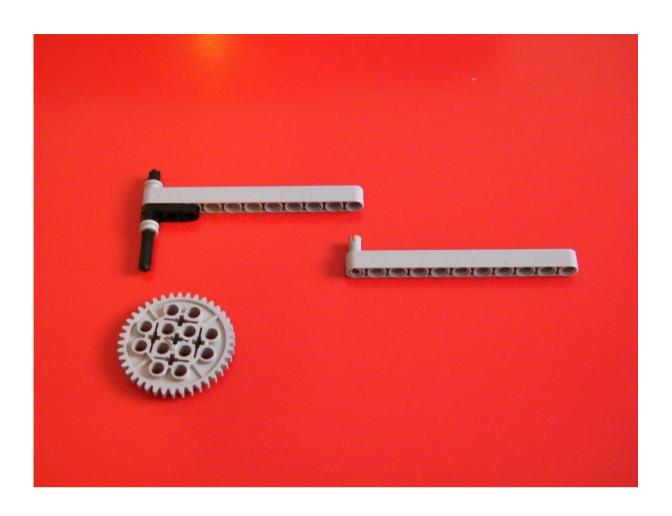

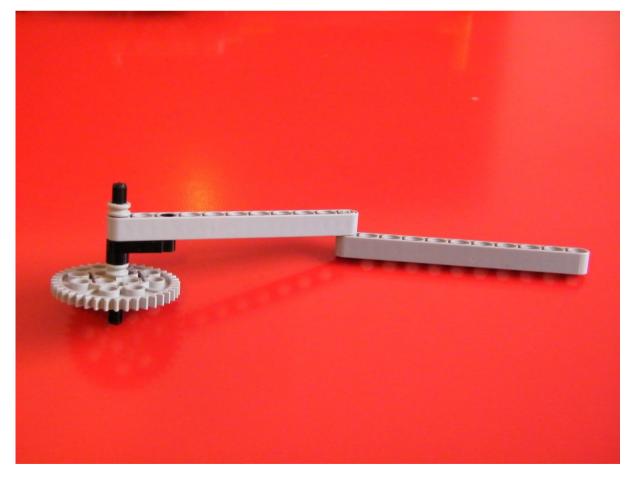


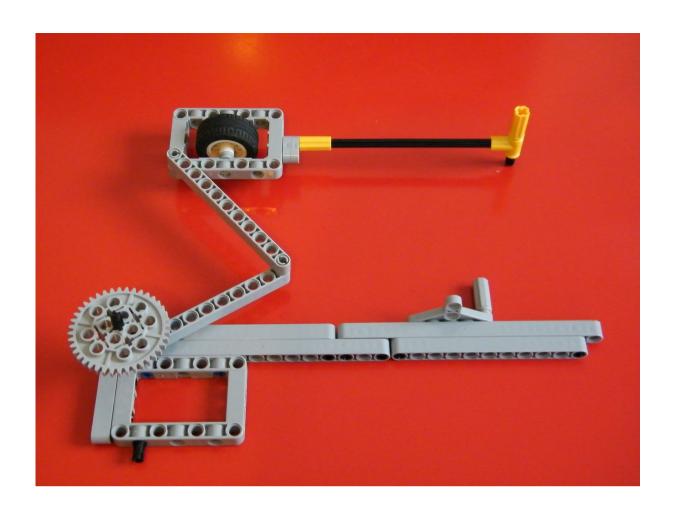


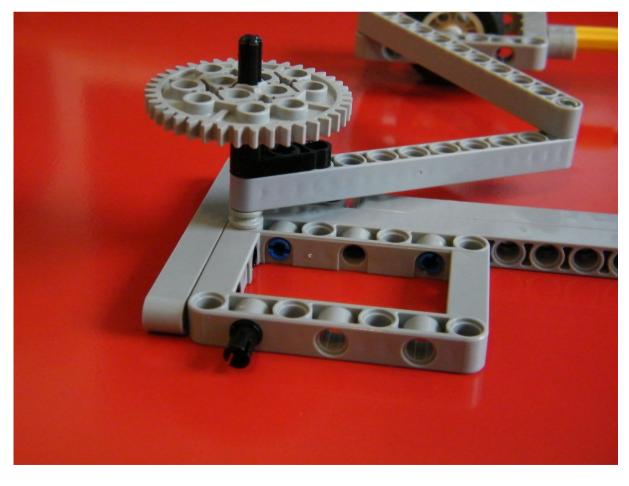


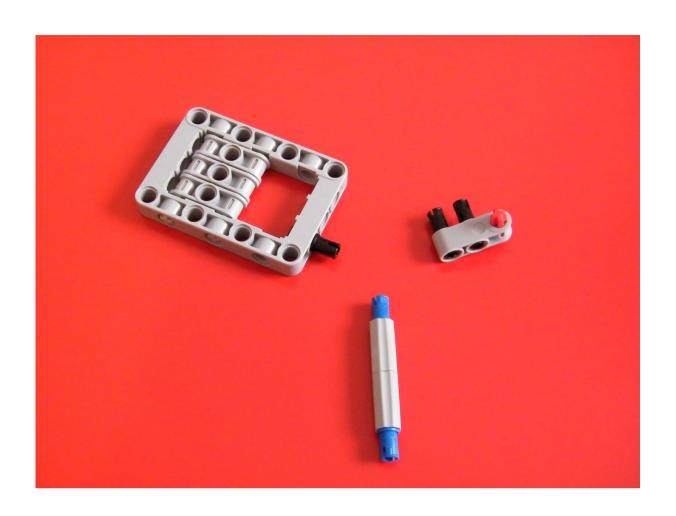





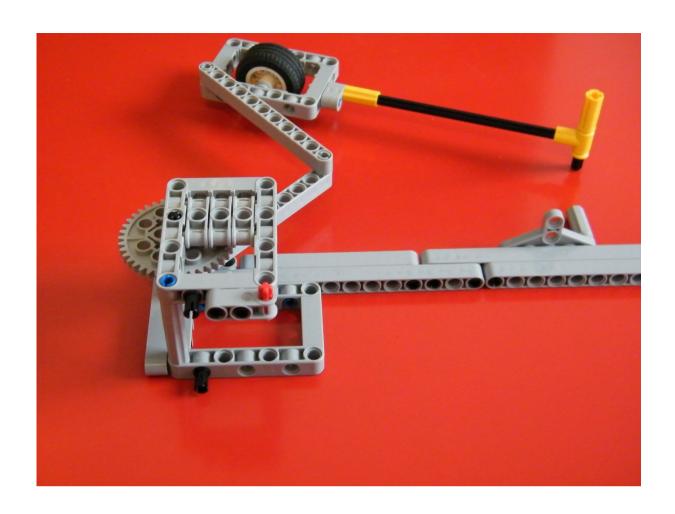

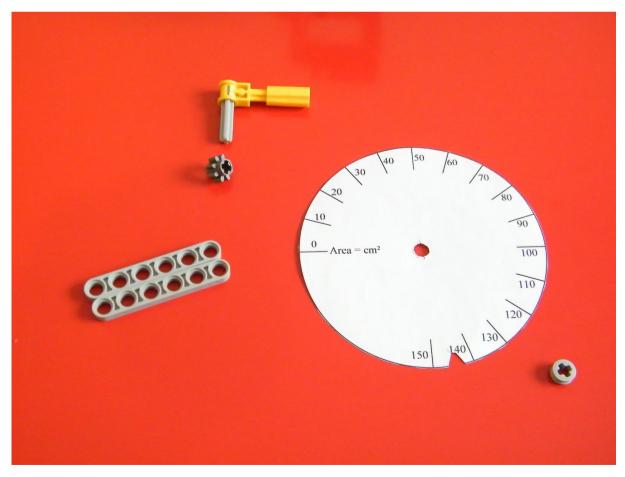

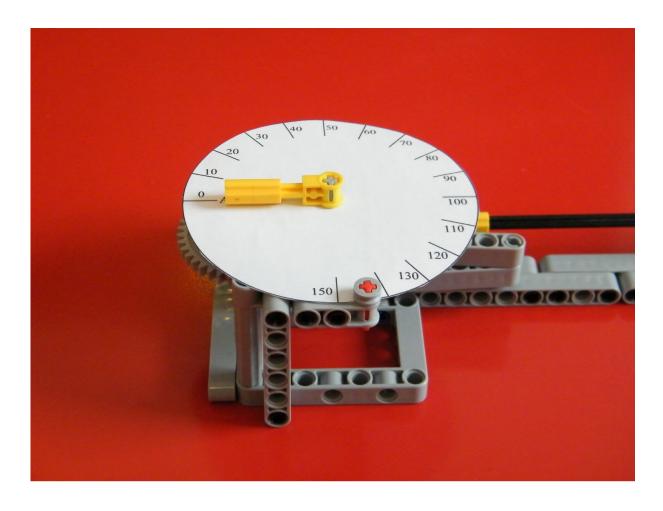

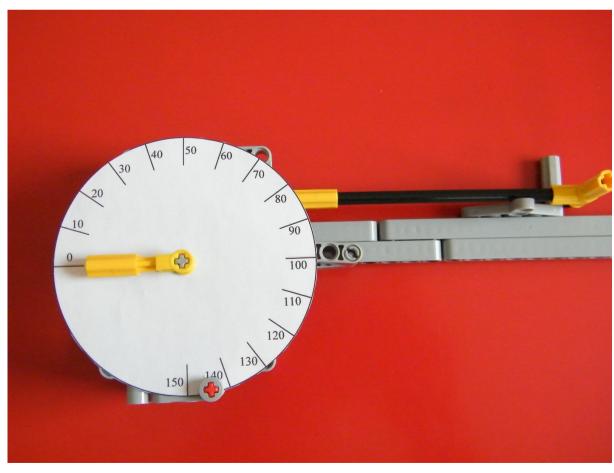

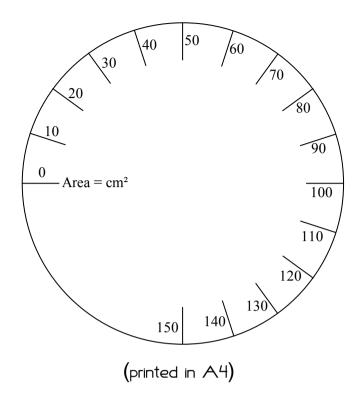

Model and building instructions designed by Nico71

www.nico71.fr